


# Wiring diagram

## ALBA 440 Console (with fixed fuel tank)\*

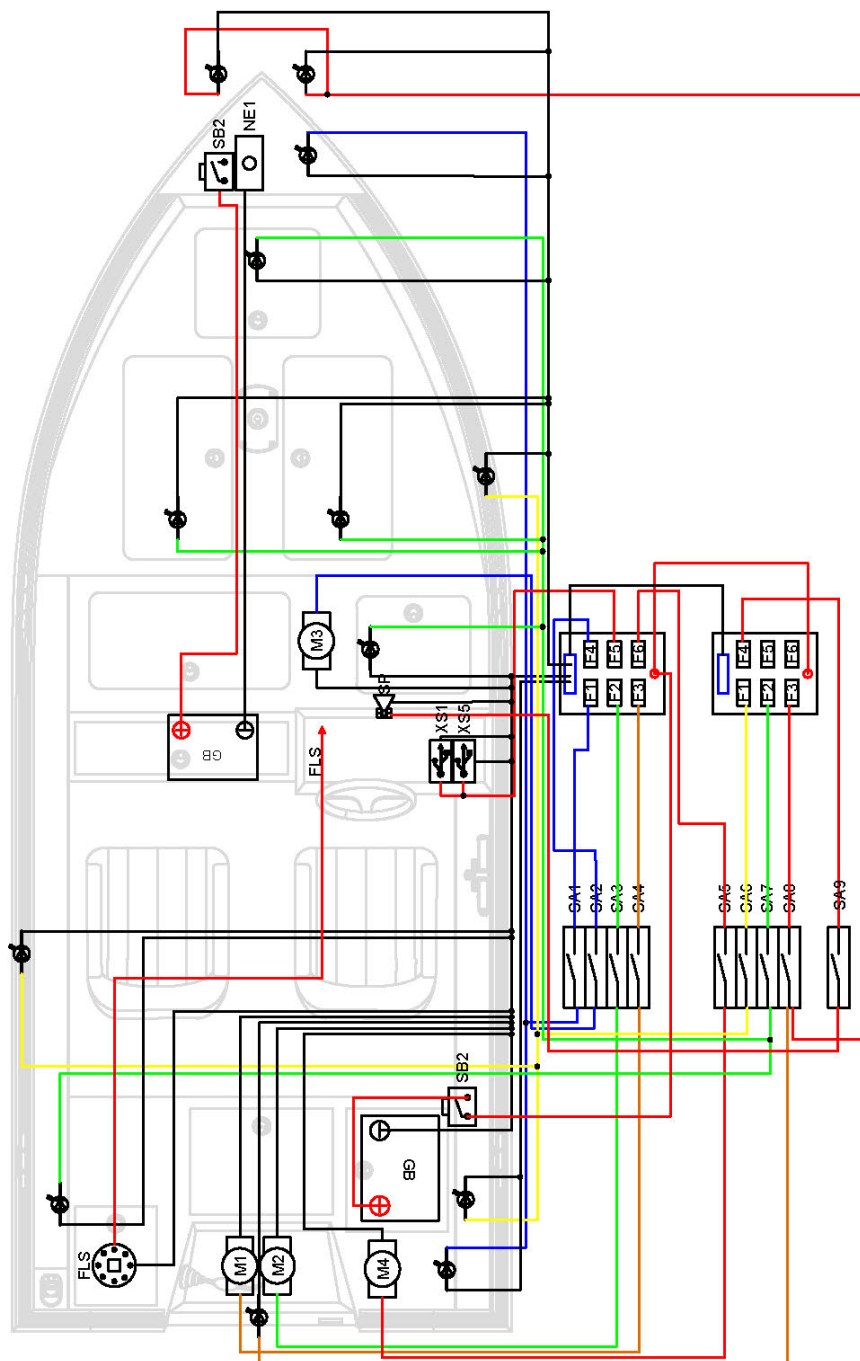

\*Additional option

<b>Code</b>	<b>Items</b>	<b>Notes</b>
GB	Battery	Optional
SB1	Switch for connecting the starting and service batteries	
		Optional
SB2	On-board power switch and engine	
SB3	Thermal switch for electric anchor	
SBA1	Remote control engine power switch	
SBA2	Remote control on-board power switch	
SASB1	Remote control button of engine power	
SASB2	Remote control button of on-board power	
M1	Bilge pump	
M2	Livewell pump	
M3	Livewell recirculation pump	Optional
M4	Washer pump	Optional
FLS	Fuel level sensor	
XS1, XS5	Power plug outlet	12V
XS2, XS3, XS4, XS6	Power plug outlet	Optional / 12V
NE1, NE2, NE3	Negative terminal block	
PO1, PO2	Positive terminal block	
VE	Lockers ventilation fan	Optional
WW	Windshield wiper	Optional
HE	Seat heater	Optional
SP	Horn	Optional
F1	Lights fuse	15A

F2	Lockers vent fuse	Optional
F3	Horn fuse	Optional
F4	Windshield wiper fuse	Optional
F5	Washer pump fuse	Optional
F6	USB plug fuse	Optional
F7	Navigation lights fuse	
F8	Bilge pump fuse	
F9	Livewell pump fuse	
F10	USB plug fuse	Optional
F11	Livewell recirculation pump fuse	Optional
F12	Lockers Ventilation fuse	Optional
FU	Seat heater/Autonomous heater Fuse	Optional
FS	Thermal fuse	
SA1	Bilge pump button	
SA2	Livewell pump button	
SA3	Livewell recirculation pump button	
SA4	Glass light button	
SA5	Cockpit light button	
SA6	Bow deck light button	
SA7	Lockers light button	
SA8	Lockers ventilation button	
SA9	Mooring light button	
SA10	Navigation light button	
SA12	Horn button	Optional
SA13	Windshield wiper	Optional
SA14	Washer button	Optional
SA15	Seat Heater button	Optional
PA1	Complex control panel	
RE	Relay	Optional
AH	Autonomous heater	Optional
REH	Potentiometer	Optional